

General operation

Screen	Operation	Voice Command						
		US English	UK English	French	German	Dutch	Italian	Spanish
Any screen	Canceling the voice control mode	Cancel	Cancel	Annuler	Abbr.	Terug	Annulla	Cancelar
	Displays the Top Menu screen	Top menu	Top menu	Menu sup	Hauptmenü	Hoofdmenu	Menu princ.	Menú superior
	Switches to DAB source *1	DAB	DAB	DAB	DAB	DAB	DAB	DAB
	Switches to Wireless Link source	Wireless Link	Wireless Link	Wireless Link	Wireless Link	Wireless Link	Wireless Link	Wireless Link
	Switches to DVD source	DVD	DVD	DVD	DVD	DVD	DVD	DVD
	Switches to HD Radio source *2	HD Radio	HD Radio	Radio HD	HD Radio	HD Radio	HD Radio	HD Radio
	Switches to iPod source	iPod	iPod	iPod	iPod	iPod	iPod	iPod
	Switches to Bluetooth Audio source	Bluetooth audio	Bluetooth audio	Audio Bluetooth	Bluetooth audio	Bluetooth audio	Audio Bluetooth	Audio Bluetooth
	Switches to SiriusXM source *2	SiriusXM	SiriusXM	SiriusXM	SiriusXM	SiriusXM	SiriusXM	SiriusXM
	Switches to STANDBY source	Standby	Standby	Veille	Standby	Stand by	Attesa	En espera
	Switches to Cloud Storage source	Storage	Storage	Storage	Storage	Storage	Storage	Storage
	Switches to Tuner source *1	Tuner	Tuner	Tuner	Tuner	Tuner	Radio	Sintonizador
	Switches to USB source	USB	USB	USB	USB	USB	USB	USB
	Switches to Pandora source *2	Pandora	Pandora	Pandora	Pandora	Pandora	Pandora	Pandora
	Switches to AUPEO! source	AUPEO!	AUPEO!	AUPEO!	AUPEO!	AUPEO!	AUPEO!	AUPEO!
	Switches to iHeart Radio source *2	iHeart Radio	iHeart Radio	iHeart Radio	iHeart Radio	iHeart Radio	iHeart Radio	iHeart Radio
	Switches to Streaming Video source	Streaming Video	Streaming Video	Streaming Video	Streaming Video	Streaming Video	Streaming Video	Streaming Video
	Switches to APPS source	Apps	Apps	Apps	Apps	Apps	Apps	Apps
	Switches to HDMI source	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI
		MHL	MHL	MHL	MHL	MHL	MHL	MHL
	Switches the AV OUT source	AV out	AV out	sortie AV	AV out	AV uit	AV out	salida AV
	Displays Hands Free screen	Hands free	Hands free	Mains libres	Telefon	Handsfree	Vivavoce	Manos libres
	Switches to Mixed Media Search	Media Search	Media Search	Media Search	Media Search	Media Search	Media Search	Media Search
	Switches to Phone Search	Phone Search	Phone Search	Phone Search	Phone Search	Phone Search	Phone Search	Phone Search
	Displays OEM Features screen *2	OEM	OEM	OEM	OEM	OEM	OEM	OEM
	Displays the view from the Front View camera	Front camera	Front camera	Caméra avant	Frontkamera	Vooruitzicht camera	Telecamera frontale	Cámara delantera
	Displays the view from the Rear View camera	Rear camera	Rear camera	Caméra arrière	Rückfahrkamera	Camera achter	Retrocamera	Cámara trasera
	Displays Current Source Control screen	Control screen	Control screen	Écran de commande	Steuerbildschirm	Scherb besturen	Scherb. di controllo	Pantalla de control
	Searches the previous station/channel.	Seek down	Seek down	Rechercher vers le bas	Suche abwärts	Omlaag zoeken	Ricerca giù	Buscar anterior
	Searches the next station/channel.	Seek up	Seek up	Rechercher vers le haut	Suche aufwärts	Omhoog zoeken	Ricerca su	Buscar siguiente
	Searches the previous track/file.	Track down	Track down	Piste précédente	Titel abwärts	Track omlaag	Traccia giù	Pista anterior
	Searches the next track/file.	Track up	Track up	Piste suivante	Titel aufwärts	Track omhoog	Traccia su	Pista siguiente
	Switches to RSS Application	RSS	RSS	RSS	RSS	RSS	RSS	RSS
	Switches to Weather Application	Weather	Weather	Météo	Wetter	weer	Tempo	tiempo
	Switches to Facebook in SNS Application	Facebook	Facebook	Facebook	Facebook	Facebook	Facebook	Facebook
	Create a Facebook Status in SNS Application	Status	Status	Statut	Status	Status	Stato	Estatus
	Switches to Twitter in SNS Application	Twitter	Twitter	Twitter	Twitter	Twitter	Twitter	Twitter
	Create a Tweet in SNS Application	Tweet	Tweet	Tweet	Twitter-Nachricht	Tweet	Tweet	Tweet
	Switches to Gmail in SNS Application	Mail	Mail	Message	Email	E-mail	Mail	Correo
	Posting the current place.	I'm Here	I'm Here	Je suis ici	Mein Standort	Ik ben hier	Ci sono	Estoy aquí
	Posting the information about the song you are listening to.	I'm Listening	I'm Listening	J'écoute	Ich höre gerade	Ik luister	In ascolto	Escucho
	Switches to Schedule Application	Schedule	Schedule	Agenda	Kalender	Rooster	Programm	Programa
	Displays the Current Location Information	View Map	View Map	View Map	View Map	View Map	View Map	View Map

Displaying Voice Commands

The available voice commands depend on each screen and you can find them by pressing and holding the Push-To-Talk switch.

1 Press and hold the Push-To-Talk switch.



The list of operable voice commands appears. Pronounce a command.

Note

- About the voice command for navigation system, refer to the instruction manual of the navigation system.
- *1 DNN9250DAB only
- *2 DNN991HD only