

# CD/USB Receiver Firmware Update Guide

## Introduction

- This document describes the procedure and precautions for upgrading the CD/USB receiver firmware.
- If an error occurs while you are updating the firmware, the CD/USB receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.
- For basic operations of the CD/USB receiver, refer to the appropriate instruction manual for your model.

## Target Model and Firmware Version

The updater can be used for the firmware versions of the models shown below.

Target models	Target firmware versions → Updated versions	Updater file name (size)
KDC-X997 KDC-BT955HD KDC-X897 KDC-BT855U KDC-BT73DAB KDC-BT53U KDC-U7056DAB KDC-U7056BT KDC-U7056BTL U585BT	Ver 02.00 or earlier → 3.00	tb12hca.krm (1.72 MB)



- For how to check your firmware version, refer to "Checking the Firmware Version".

## Work Flow

- Step 1** Download the firmware files, and copy them to USB memory.
- Step 2** Update the firmware. (It takes about 10 minutes.)  
Reset the CD/USB receiver.
- Step 3** Check that the firmware has been updated.

## Creating the Update Media

Create the update media on your PC.

1. Download the appropriate updater for the model and firmware version to update.
2. Copy the updater to the top of hierarchy in USB memory.



- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

## Checking the Firmware Version

1. Press the [ ] button to enter Bluetooth mode.
2. Turn the [Volume] knob to display "Settings", and press the [Volume] knob.
3. Turn the [Volume] knob to display "Detailed Settings", and press the [Volume] knob.
4. Turn the [Volume] knob to display "BT F/W Update", and press the [Volume] knob.  
Current firmware version is displayed on the right side of "BT F/W".

## Firmware Update Procedure

1. Connect the USB memory to the front USB input terminal of the CD/USB receiver.  
 Do not connect anything to the rear USB input terminal.
2. When an audio file is played or "No Music Data" is displayed, press the [SRC] button and select "STANDBY" (standby state).
3. Press the [ ] button to enter Bluetooth mode.
4. Turn the [Volume] knob to display "Settings", and press the [Volume] knob.
5. Turn the [Volume] knob to display "Detailed Settings", and press the [Volume] knob.
6. Turn the [Volume] knob to display "BT F/W Update", and press the [Volume] knob.  
Current firmware version is displayed on the right side of "BT F/W".
7. Press the [Volume] knob.
8. Turn the [Volume] knob to display "YES", and press the [Volume] knob.  
Update starts with "Updating" displayed. Update should finish in **approximately 10 minutes** and "Completed" is displayed upon completion.
9. Press the [ ] button.
10. Press the Release button to Detach the faceplate.
11. Press the Reset button.  
Update on the firmware takes effect.
12. Reattaching the Faceplate
13. Check that the firmware version is updated, by referring to "Checking the Firmware Version".



### • When "No File" is displayed

- Check if the updater is on the top of hierarchy.
- Check if the updater file name is appropriate for the model to update.

## Precautions

- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or CD/USB receiver power while updating. Update cannot be performed correctly and the CD/USB receiver may become unusable.